


### Option 1

Turning off: manually via remote PPR-1/3 and automatically in the presence of external 230VAC  
 Turning on: always manually via remote PPR-1/3

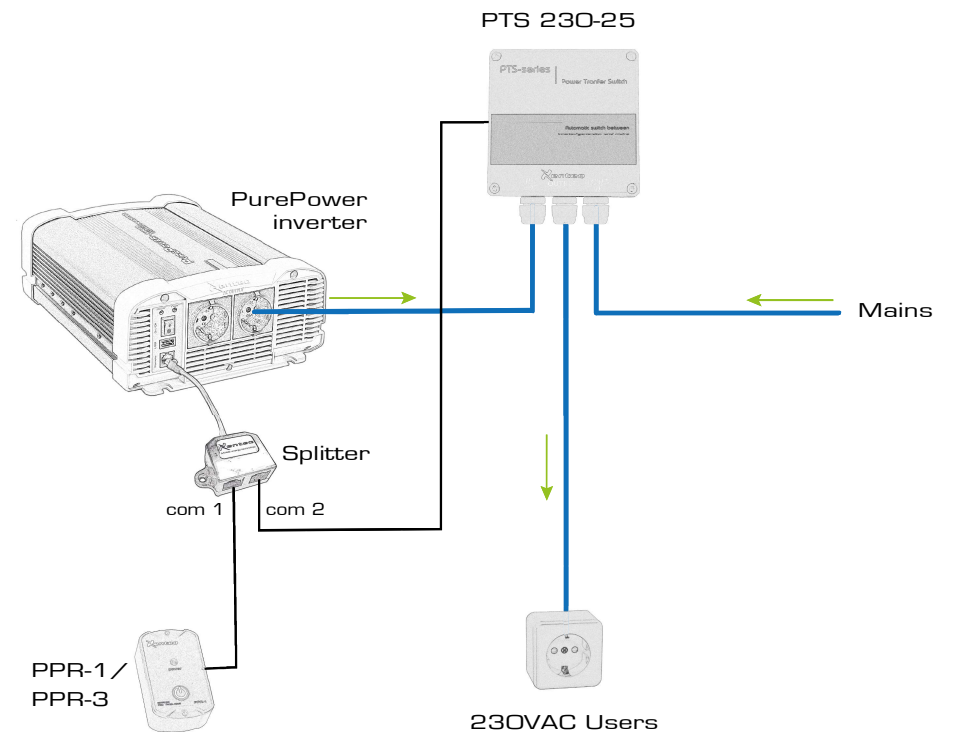

### Option 2

Turning off: manually via remote PPR-1/3 and automatically in the presence of external 230VAC  
 Turning on: based on memory function and manually via remote PPR-1/3

**Note:**

The T-splitter can only be used for the combination of the PurePower inverter with the PTS 230-25 and the PPR-remotes!  
 Other use can damage all connected devices.